

Congratulation on buying the Solutions Beatbox. Please read this manual carefully to make sure that you are using it correctly.

#### TEMPO

To change the tempo, use the large, right dial. Select from 30 to 280 beats per minute.

#### MEASURE A TEMPO

Use the "Mode" button to select "Tap." Then tap a (steady) beat on the "Start/Tap" button. Use the "Mode" button to return to "Metro1", "Metro2", or "Metro3" to hear the set tempo.

#### TIMBRE

Use the "Mode" button to choose among the "Metro1", "Metro2", and "Metro3" timbre settings.

#### VOLUME

- The master volume control is the small, bottom-right dial.
- The volume of downbeats is controlled by the small, bottom-left dial (it has "10" under it).
- The volume of quarter note beats within a bar is controlled by the small, second-from-left dial (it has a quarter note beneath it).
- The volume of eighth note offbeats is controlled by the small, third-from-left dial (it has an eighth rest followed by an eighth note under it).
- The volume of triplet, eighth note offbeats is controlled by the small, third-from-right dial (it is connected by a line to the left vertical slider above).
- The volume of sixteenth note offbeats is controlled by the small, second-from-right dial (it is connected by a line to the right vertical slider above).

#### BEATS

- Use the "Beat" button to select the metre.
- Select from 0 to 9. Select 0 or 1 for a downbeat every beat. Select 3 for a 3/4 bar, 4 for a 4/4 bar, and so on.
- Each dial at the bottom of the unit controls the volume for one part of a rhythm pattern (see above instructions for "Volume").
- Use the vertical sliders to set offbeat patterns.

#### PROGRAM

- Choose a metre ("Beat" button), tempo ("Tempo" dial), and timbre ("Mode" button). Press "Store" to save.
- Use ► and ◀ to select the program number. Save settings 01 to 31.
- Setting 00 is preset and can't be changed.

#### BACKLIGHT

Press and hold ☀ (light bulb) button for a blue backlight for the display screen.

#### VOICE

Press the "Voice" button on the left side of the unit to have a voice say the beats in a bar. (Bars can have up to nine beats, but the voice will only say up to six.)

#### TIMER

To set the timer, use the large, left dial. Set timer for between 1 and 90 minutes. When time expires, a steady beeping will sound and the red LED lights will flash (press the "Start/Tap" button to turn this off).