Solutions
Practice Pad

OPERATION MANUAL SDMP-1

Congratulations on buying Solutions practice pad with metronome. Please read this manual carefully to make sure you know how to use it correctly.

ONE. NOTICE FOR SAFETY USE

Overall

- ☐ Never use alcohol, petrol or other strong chemical detergent to wash the LCD or the body of the unit.
- ☐ Please do not crush or strike the body of the unit, otherwise its LCD can be broken or cause other malfunctions.
- ☐ Please do not keep or use the unit under the circumstances of high temperature, high humidity or dust.

Battery Use

- ☐ Please pay attention to the polarity of the battery when putting in new battery.
- ☐ Take out of the battery if the unit will not be used for a long time.
- ☐ Take the battery out and put it in again after 10 seconds when the unit does not work properly.
- ☐ Replace with new battery when the LCD show is not clear.
- ☐ Please dispose the old battery properly.

TWO. MAIN PARTS AND FUNCTIONS

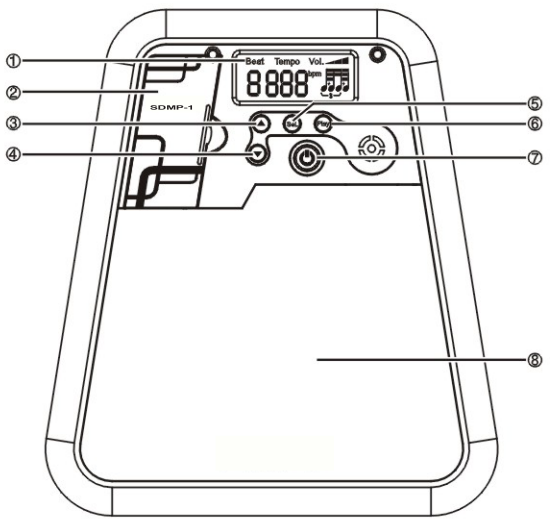

① LCD DISPLAY---------- Display beat, styles of Rhythm, Tempo, Sound Volume.
②Battery Cabinet---------- Hold 2 pieces of AAA battery
③▲ ---------- press it to increase the data.
④▼ ----------press it to decrease the data.
⑤"Select" key----------Select Beat, Tempo, Styles of Rhythm.
⑥"Play" Key----------Start or stop the playing of metronome.
⑦"Power" Key----------Turn on or Shut off the SDMP-1.
⑧Drum pad---------- Pad for practising drum beating.

THREE. OPERATION GUIDE FOR METRONOME MODE

1.When the battery is initially put into SDMP-1, every signs will be shown on the LCD for one second and then it will enter into "Metronome Mode"in one second.

2 . Press "Select" key to enter into adjusting mode:

(1) Press "Select" key for the first time to adjust beat, the "beat value" will flicker on the LCD, then press ▲ or▼to change beat. Adjust range: 0~6.

(2) Press "Select" key for the second time to adjust tempo, the "tempo value" will flicker on the LCD, then press ▲ or ▼ to change tempo. Adjust range: 30~260.

(3) Press "Select" key for the third time to adjust Rhythm, the "rhythm value" will flicker on the LCD, then press ▲ or▼ to change the styles of Rhythm.

(4) Press "Select" key for the fourth time, SDMP-1 will be back to Metronome mode.

(5) Under adjusting mode, if no any operation for 10 seconds, SMDP-1 will automatically be back to Metronome mode. Then press " PLAY"key, it will play the metronome.

3. When finishing setting up all the parameters, press "Play" key for the first time to play the metronome; Press "Play" key for the second time to stop the playing of metronome.

(1) During the playing of metronome, press ▲ or ▼ to change the sound volume.

(2) During the playing of metronome, press "Play" key to stop the playing. Then if no any operation for 3 minutes, SMDP-1 will automatically shut off.

4. When your practice finishing, press "Power" key for at least two seconds to shut off SMDP-1

5. Next time when you use SDMP-1, press "Power" key for at least two seconds to turn it on,then repeat step 1~step4.

6. Replace the batteries as follows:

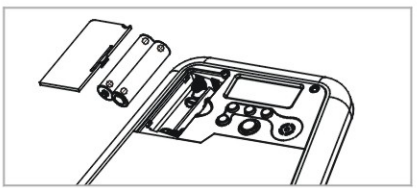

FOUR. SPECIFICATIONS

1.Metronome:
  a. Rhythm：♩ ♫ 𝅘𝅥𝅯𝅘𝅥𝅯 𝅘𝅥𝅯𝅘𝅥𝅯𝅘𝅥𝅯𝅘𝅥𝅯 𝅘𝅥𝅯𝅘𝅥𝅯𝅘𝅥𝅯 ♫ ♫
  b. Beat：0、1、2、3、4、5、6。
  c. Tempo range：30-260
  d. Sound Volume：MUTE/LOW/MIDDLE/HIGH 4 Steps
2.Volume:174(L)X155(W)X19(D)mm
3.Weight: 20g
4.Power supply: 3V（2XAAA）

FIVE. ACCESSORIES

1.User's Manual
2. AAA battery (two pieces)
3.Bag(one)
4.Sticks (one pair)
5.Certificate of QC pass

*During the improvement of the product, the design and specifications are subject to change without notification in advance.